
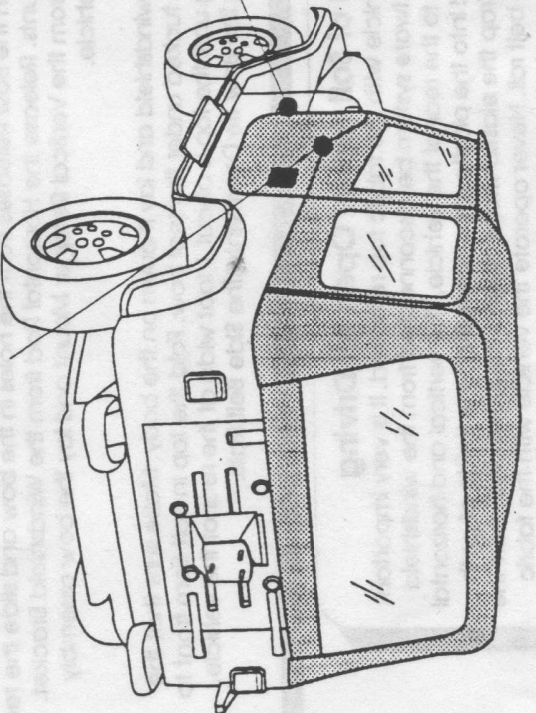
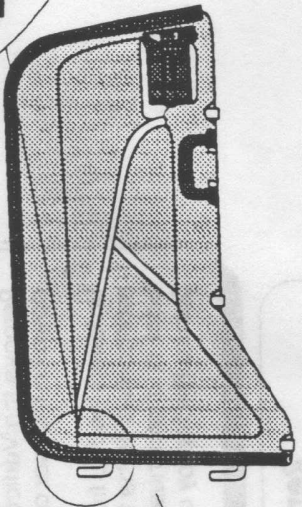




## Step Twenty-one

Locate the Lower Hinge Pin Adjustment Plate on the Lower Door frame. If the Lower Door needs to be adjusted for a better fit against the body, use a 7/16" Wrench to loosen the two bolts in the adjustment plate. Slide the Hinge Pin backward or forward as necessary for the best fit. Tighten the bolts.

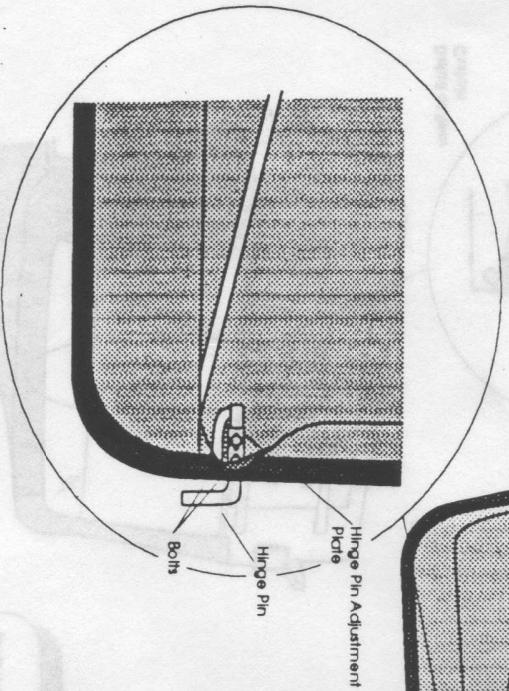

## Step Twenty-two

Install the upper door pins into the lower door. Starting with the front pin, slip the pins into the sockets in the lower door. Make sure that the pins are well seated in the sockets. Close the door to check that it fits properly against the body. If necessary, use a 1/8" Allen Wrench to loosen the Collars on the front and rear upper door pins. The Collars will slide up or down as needed to provide the best fit of the Upper Door against the windshield. Attach the loop strip on the bottom of the upper door to the hook strip on the top of the lower door. If necessary for proper door fit, bend the door slightly.

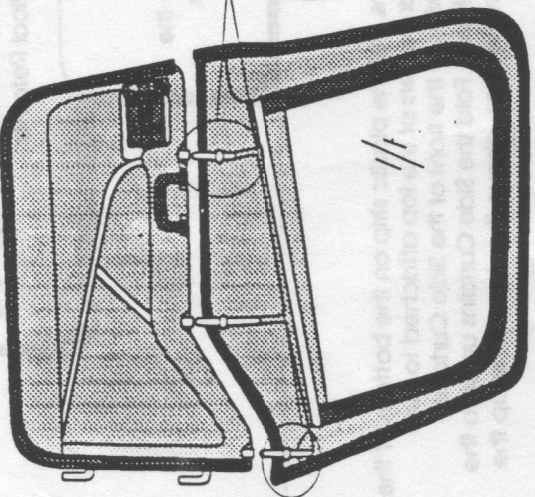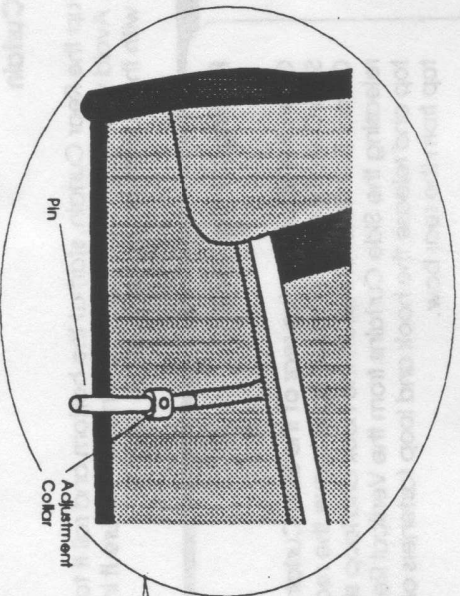

**Note:** Lubricating the upper door pins with a light weight oil will make it easier to install and remove the upper door.